Assembly and Operating Instructions for the "Boden- und Façonschleifeinrichtung" (retrofit kit for sanding the bottom and sides of reeds)

Dimensions of producible blanks: Length: 60 to 75 mm (adjustable) Width at the tip: 12 to 13 mm (adjustable) Conicity of the Façon: according to the conicity of the bar (available conicity 1 : 50 or parallel) Thickness: 3.0 to 3.5 mm

Operating principle:

The "Boden- und Façonschleifeinrichtung" as retrofit kit for the taper reed machine BKM 4 includes:

- An **add-on part**, which is to be mounted on the left side of the machine instead of the standard suction nozzle holder
- A **bar**, on which the split piece of reed will be clamped

The add-on part carries a mechanical stop (eccentric), parallel with the scanning disc and the sanding disc. You drive the bar by hand along the eccentric and the scanning disc. In so doing, parallel and even surfaces will be sanded onto the piece of reed. By turning the eccentric you adjust the space between bar and sanding disc. In this way you vary the width and the thickness of the blank you are producing.

Mounting of the add-on part (if delivered as retrofit kit):

Mount the add-on part at the body of the BKM 4 in that way, so you can position the bar with its broad side on the eccentric and the scanning disc at the same time. Thereby it must not shake and no light gap should be seen. Therefore tighten one of the Allen screws moderately tight, twist the add-on part accordingly and then tighten the other screw. When doing this, make sure, that the position does not change any more (press against it if necessary). Check parallelism after having tightened the first screw; if necessary repeat procedure of adjustment.

When sanding the taper the add-on part may remain at the machine.

Clamping a piece of reed:

First, the bar needs to be adjusted to the length of the piece of the reed. For that reason you displace the fixed clamping claw, which is screwed onto the narrow side of the bar from below, so much that the distance between the tips is about 2 mm less than the length of the reed is. The piece of reed needs to be placed outside to the bottom into the recess of the bar. First you press the front, that will later become the tip of the reed, into the claw at the broad side of the bar and shift this claw backwards. Then you can put the whole piece of reed into the recess and have it pressed by the back shifted clamping claw against the fixed clamping claw. When the ends of the piece of reed are pressed into the recess both by setting it into the shiftable clamping claw as well as by placing it to the fixed clamping claw, it will align automatically parallel with the bar.

You unclamp the sanded blank accordingly in reversed order.

Sanding:

For your first try, leave the scanning disc in its normal position and turn the eccentric to 5 (this will result in maximum width and thickness).

For sanding the Façon (the sides) and the bottom hold the narrow end of the bar in your left hand, the broad end in your right hand, and as a basic principle **move the bar from the left to the right**, i.e. in the opposite direction of sanding. Thereby it must be held securely.

First you sand the Façon. For this you position the broad end of the bar with the piece of reed upwards at the scanning disc. Then you guide the narrow end of the bar to the eccentric and finally

move the bar along the scanning disc and the eccentric to the right. In case the piece of reed touches the suction nozzle holder, it first has to be roughly pre-sanded, then finish-sanded.

Accordingly, you sand the other side with the piece of reed held downwards.

To make the bottom you proceed similarly. Because of the larger width of cut it is advisable to sand several times (but moving the bar always from the left to the right), and reduce less material. By twisting the eccentric you vary the distance between sanded surfaces and the bar. One scale graduation mark equates to 0.1 mm. So the width of the reed can be diminished by 2 (2 sanded surfaces) x 5 (scale graduation marks) x 0.1 mm = 1 mm, the thickness by 0.5 mm. Basically, twisting the scanning disc, too, can do the adjustment. However, to treat its bearings with care, you should do this only in case the setting range of the eccentric is not insufficient.

The flatness of the sanded bottom of the reed depends on how straight the piece of reed is. A bulgy or concave piece of reed warps when clamped. Naturally, when you unclamp it the bottom will not be plane any more.

However, if you use a reed that is reasonably straight, the bottom of the reed will become flat enough for you to easily finish it: you pull the wood as you usually do across a sandpaper that lies on a flat plate or a plane sharpening stone.

Production and distribution: Wilfried Schmidt Maschinenbau Aixer Str. 44 D-72072 Tübingen Germany Tel.: +49 (0) 7071 38870 Fax: +49 (0) 7071 38876 info@nabendynamo.de